


CLEVIS PIN AND WEAR PLATE KIT

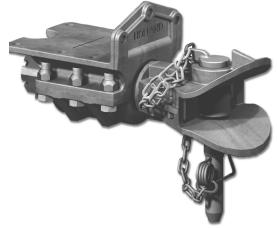



RK-10291

For PH-990ST71 Pintle Hooks

DISASSEMBLY AND INSPECTION

Please read and understand all instructions before attempting to disassemble or assemble the pintle hook. Clean and inspect the upper housing (XA-T-311), lower housing (XA-T-312), and pintle hook (XA-10286). Check for cracks along the lower portion of the upper housing and along the side of the lower housing, as shown in FIGURE 1.

If cracks are found on both the upper and lower housings, discard the pintle hook assembly and replace with a new PH-990ST71.

If cracks are found on only one of the housings **and** the pintle hook, discard the pintle hook assembly and replace with a new PH-990ST71.


If cracks are found on just one of the three components (housings or pintle hook), replace the cracked component.


If no cracks are found, proceed with the replacement of the clevis pin and wear plates as shown in *FIGURE 2*. Do not reuse the old bolts, washers, or connecting link. Add Loctite® to the bolts and wear plate threads before assembly.


FIGURE 1

UPPER and LOWER HOUSINGS

 EXAMINE FOR CRACKS



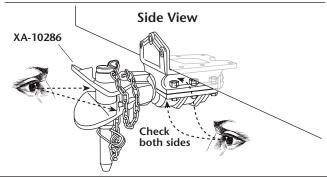

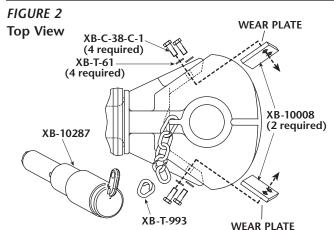

XL-PH311-02

1



HOLLAND USA, INC. 1950 Industrial Blvd. • P.O. Box 425 • Muskegon, MI 49443-0425 Phone 888-396-6501 • Fax 800-356-3929 www.thehollandgroupinc.com

Copyright © November 2003 • The Holland Group, Inc.

Holland USA, Inc. Facilities: Holland International, Inc. Holland Hitch of Canada, Ltd. Holland Equipment, Ltd. Holland Hitch of Canada, Ltd. Woodstock, Ontario • Canada Phone: 519-537-3494 Fax: 800-565-7753 Norwich, Ontario • Canada Phone: 519-863-3414 Fax: 519-863-2398 Surrey, British Columbia • Canada Phone: 604-574-7491 Dumas, AR Holland, MI Muskegon, MI Holland, MI Warrenton, MO Phone: Fax: 616-396-6501 616-396-1511 Wylie, TX Phone: Fax: 604-574-0244 Ph: 888-396-6501 Fax: 800-356-3929

2 XL-PH311-02