




COUPLING PRODUCTS

OPERATING INSTRUCTIONS

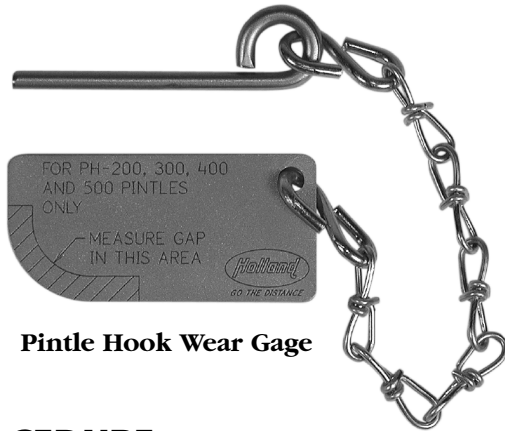

Pintle Hook Wear Gage for Holland pintle hooks ONLY

PROCEDURE

This inspection guide applies to Holland pintle hooks only.

Inspect the Pintle Hook for Wear:

Using a Holland Pintle Hook Gage, check the wear on the hook portion of the pintle hook.

Place the gage in the pintle hook according to *Figure 1*. Make sure the long straight edge is vertical and parallel to the pintle hook mounting surface. Make sure the air plunger is **DISENGAGED**.

Wear-out is indicated if the gage pin can be inserted between the gage and the hook in the area marked on the wear gage (*Figure 2*). Replace the pintle hook if this condition exists.

Check the Pintle Hook Mounting

In addition to being a safety hazard, a loose mounting will cause excessive chocking and rapid wear. Reinstall or replace any pintle hook which is not securely mounted.

Check the Pintle Hook for Damage

Inspect the pintle hook for any nicks, gouges, deformation or cracks which may interfere or affect the safe use of the pintle hook. Replace the pintle hook if any damage is noted.

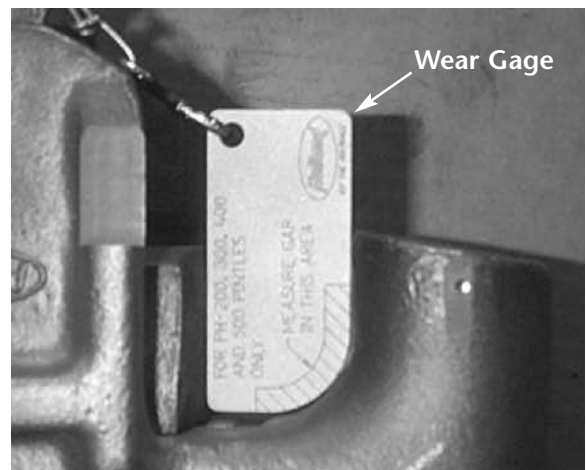


FIGURE 1
Wear gage is shown in a **new** pintle hook.

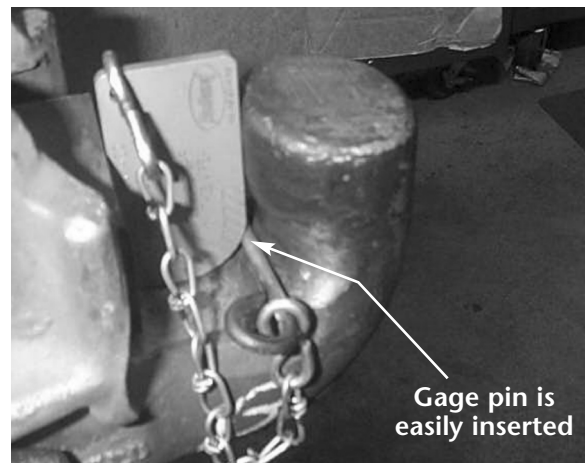


FIGURE 2
Wear gage is shown in a **worn** pintle hook.

| PINTLE HOOK | WEAR GAGE |
|--|------------------|
| PH-550 | TF-10520 |
| PH-200, PH-300, PH-400, PH-400-H | TF-10612 (shown) |
| PH-210, PH-310, PH410 | TF-10612 |
| PH-760 and PH-775 | TF-10521 |
| PH-T-60-AOL-8, PH-T-60-AOS-L-8 PH-30, PH-35 | TF-10522 |
| PH-T-90-A and PH-T-126-A | TF-10523 |



SAF-HOLLAND USA, Inc.
888.396.6501 Fax 800.356.3929

SAF-HOLLAND Canada Limited
519.537.3494 Fax 800.565.7753
Western Canada
604.574.7491 Fax 604.574.0244