



# PH-760

## FLANGE REPLACEMENT PROCEDURES




RK-02772 for PH-760

### REPLACEMENT INSTRUCTIONS

1. Disassemble the pintle hook from the truck frame. Inspect the pintle hook for wear following the guidelines found in Holland publication XL-PH215-XX.
2. Remove old flanges and mounting hardware from the truck frame. Discard.
3. Clean, and then apply Never-Seez to the shank of the pintle hook where the flanges make contact with the shank. (See **FIGURE 1**.)
4. Install new front and rear flanges on the vehicle with the hardware provided. The flanges are in the proper position when the pintle shank rotates freely. Make sure the bolts are properly tightened (recommended minimum torque of 200 ft-lbs. per SAE J429).
5. Insert the pintle shank into the flanges, then re-install the washer and nut.
6. Tighten the nut to 40-60 ft-lbs torque, then back off – as required – to insert the new cotter pin into one of the slots in the nut. Spread the cotter pin.
7. Grease the flanges prior to operation.
8. Follow operating and maintenance instructions found in Holland publication XL-PH215-XX.

FIGURE 1

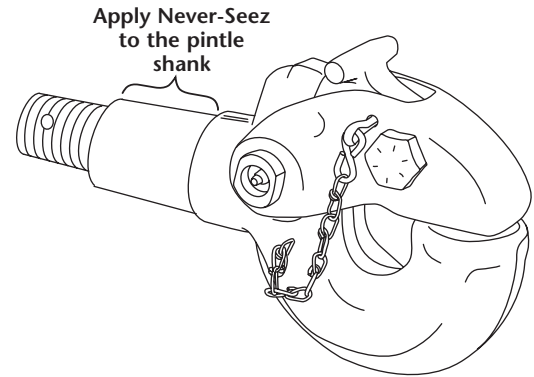

Copyright © April 2002 • The Holland Group, Inc.

#### Holland USA, Inc. Facilities:

Denmark, SC Muskegon, MI  
Dumas, AR Warrenton, MO  
Holland, MI Whitehouse Station, NJ  
Milpitas, CA Wylie, TX

Ph: 888-396-6501 Fax: 800-356-3929

#### Holland International, Inc.

Holland, MI  
Phone: 616-396-6501  
Fax: 616-396-1511

#### Holland Hitch of Canada, Ltd.

Woodstock, Ontario • Canada  
Phone: 519-537-3494  
Fax: 800-565-7753

#### Holland Equipment, Ltd.

Norwich, Ontario • Canada  
Phone: 519-863-3414  
Fax: 519-863-2398

#### Holland Hitch Western, Ltd.

Surrey, British Columbia • Canada  
Phone: 604-574-7491  
Fax: 604-574-0244