1

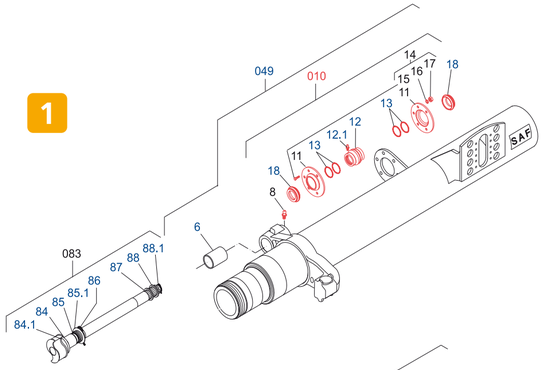

SK 9042 / 11242 >> Built 21.08.1995

Item	Part-No.	Qty.	Description
6	4 230 0176 00	2	Bushing D50/46 x 40
010	3 268 0034 00	2	Camshaft bearing assy incl. Pos. 11-18
049	3 434 3622 00	1	Camshaft bushing repair kit incl. Pos. 6, 12-13, 18, 083
083	3 317 0011 00	2	Repair-kit camshaft incl. Pos. 84-88.1

2

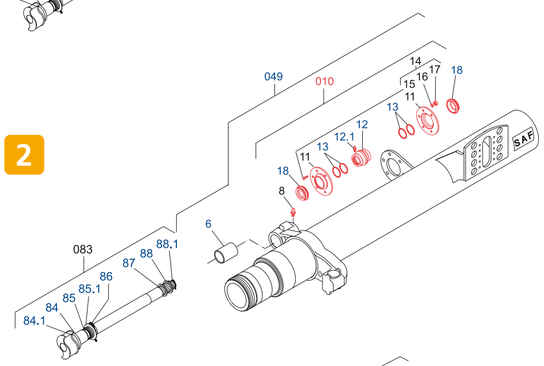

SK 9042 / 11242 Built 22.08.1995-14.02.1998

Item	Part-No.	Qty.	Description
6	4 230 0180 00	2	Bushing D56/60 x 33
010	3 268 0034 00	2	Camshaft bearing assy incl. Pos. 11-18
049	3 434 3638 00	1	Camshaft bushing repair kit incl. Pos. 6, 12-13, 18, 083
083	3 317 0016 00	2	Repair-kit camshaft incl. Pos. 84-88.1

3

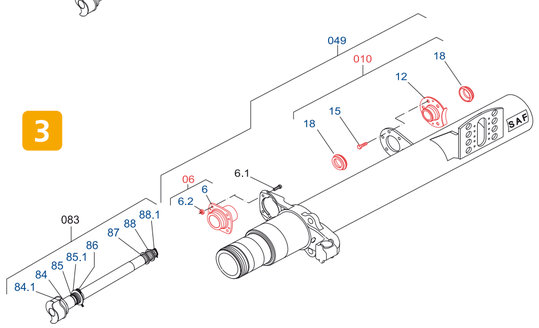

SK 9042 / 11242 Built 15.02.1998 >>

Item	Part-No.	Qty.	Description
06	3 268 0050 00	2	Camshaft bushing unit incl. Pos. 6, 6.2
6.1	4 051 7001 10	8	Bolt
010	3 268 0047 00	2	Camshaft bushing kit incl. Pos. 12-18
049	3 434 3639 00	1	Camshaft bushing repair kit incl. Pos. 06, 010, 083
083	3 317 0016 00	2	Repair-kit camshaft incl. Pos. 84-88.1

4

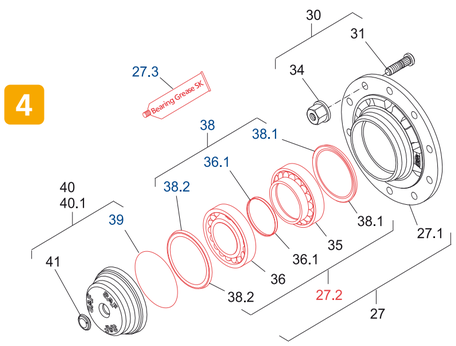

SK 9042 / 11242 SK 1000 ET0 (INTRAAX)

Item	Part-No.	Qty.	Description
27	3 307 3006 00	2	Hub unit incl. Pos. 27.1, 35, 36, 36.1, 38.1, 38.2
27.2	3 434 3012 00	2	Rep-kit hub-bearing incl. Pos. 27.3-39
27.3	5 387 0011 05	2	Grease
30	3 302 1078 00	20	Wheel bolt kit MZ incl. Pos. 31, 34 - **single**
30	3 302 1076 00	20	Wheel bolt kit incl. Pos. 31, 34 - **twin**
38	3 434 3014 01	2	Rep-kit seal ring incl. Pos. 27.3, 36.1, 38.1, 38.2, 39
39	4 315 0054 00	2	O-Ring D182x4
40	3 304 0072 00	2	Hub cap incl. Pos. 39-41
40.1	3 304 0076 00	2	Hub cap ABV incl. Pos. 39-41
41	4 337 2026 02	2	Plug

5

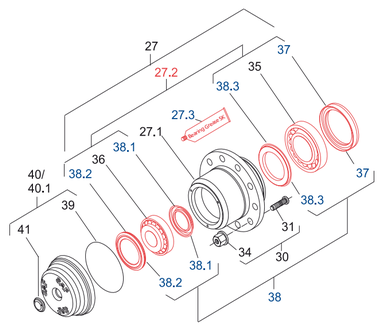

SK 9030 / 11030 / 12242 / 12037 / SK 500 / SK 500 *plus*

Item	Part-No.	Qty.	Description
27	3 307 2056 00	2	Hub unit assy. incl. Pos. 27.2 9030 / 11030 / 12037
27	3 307 1159 00	2	SK 12242 / SK 500
27	3 307 1166 00	2	SK 500 *plus*
27.2	3 434 3016 00	2	Rep-kit hub-bearing incl. Pos. 27.3, 35-38.3
27.3	5 387 0011 05	2	Grease
30	3 302 1078 00	20	Wheel bolt kit MZ incl. Pos. 31, 34 - **single**
30	3 302 1076 00	20	Wheel bolt kit incl. Pos. 31, 34 - **twin**
38	3 434 3017 00	2	Rep-kit grease incl. Pos. 27.3, 37-38.3
39	4 315 0064 00	2	O-ring D148x4
40	3 304 0086 00	2	Hub cap incl. Pos. 39-41
41	4 337 2026 02	2	Plug

Brake repair kit
SNK 300x200, SNK 367x200
SNK 420x180, SNK 420x200
for one axle

6

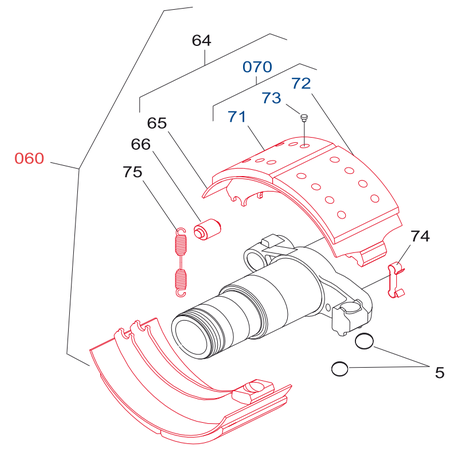

SK 9030 / 11030 / Z9-3020 / Z11-3020

Item	Part-No.	Qty.	Description
5	4 199 1002 00	4	Anchor ball 40 mm
060	3 434 3655 00	1	Brake kit SNK 300x200 incl. Pos. 64, 74, 75
64	3 055 0129 01	4	Brake shoe assy incl. lining, incl. Pos. 66
65	3 054 0129 01	4	Brake shoe without brake lining, incl. Pos. 66
66	1 265 0019 00	4	Cam-roller
070	3 057 3924 00	1	Brake lining kit SNK 300x200 incl. Pos. 71-73
74	1 151 0013 00	2	Retaining clamp
75	1 447 0060 00	2	Return spring

SK 9037 / 11037 / Z9-3720 / Z11-3720

Item	Part-No.	Qty.	Description
5	4 199 1002 00	4	Anchor ball 40 mm
060	3 434 3616 00	1	Brake-kit SNK 367x200 incl. Pos. 64, 74, 75
64	3 055 0128 00	4	Brake shoe assy incl. lining, incl. Pos. 66
65	3 054 0128 00	4	Brake shoe without brake lining, incl. Pos. 66
66	1 265 0019 00	4	Cam-roller
070	3 057 3970 00	1	Brake lining kit incl. Pos. 71-73
74	1 151 0008 00	2	Retaining clamp
75	1 447 0058 01	2	Return spring

SK 9042 / SK 500 / SK 500 *plus* / S9- / Z9-4218

Item	Part-No.	Qty.	Description
5	4 199 1002 00	4	Anchor ball 40 mm
060	3 434 3653 00	1	Brake-kit SNK 420x180 incl. Pos. 64, 74, 75
64	3 055 0120 00	4	Brake shoe assy incl. lining, incl. Pos. 66
65	3 054 0120 00	4	Brake shoe without brake lining, incl. Pos. 66
66	1 265 0019 00	4	Cam-roller
070	3 057 3960 00	1	Brake lining kit SNK 420x180 incl. Pos. 71-73
74	1 151 0008 00	2	Retaining clamp
75	1 447 0058 01	2	Return spring

SK 9042-20 / 11242 / S11-/ Z11-4220

Item	Part-No.	Qty.	Description
5	4 199 1002 00	4	Anchor ball 40 mm
060	3 434 3654 00	1	Brake kit SNK 420x200 incl. Pos. 64, 74, 75
64	3 055 0122 00	4	Brake shoe assy incl. lining, incl. Pos. 66
65	3 054 0122 00	4	Brake shoe without brake lining, incl. Pos. 66
66	1 265 0019 00	4	Cam-roller
070	3 057 3966 00		Brake lining kit SNK 420x200 incl. Pos. 71-73
74	1 151 0008 00	2	Retaining clamp
75	1 447 0058 01	2	Return spring

7

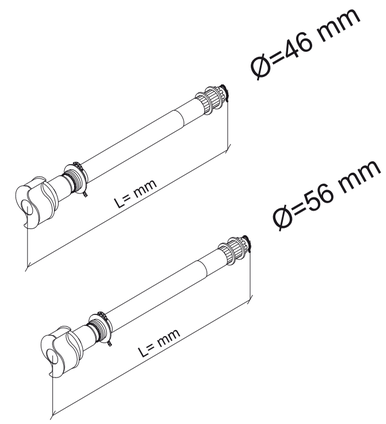

SNK 300 Ø46

L mm	Part-No. LH	Part-No. RH
212	2 262 1511 00	2 262 1512 00
219	2 262 1527 00	2 262 1528 00
258,5	2 262 1507 00	2 262 1508 00
497,5	2 262 1503 00	2 262 1504 00
582	2 262 1509 00	2 262 1510 00
662,5	2 262 1501 00	2 262 1502 00
689,5	2 262 1515 00	2 262 1516 00
725	2 262 1505 00	2 262 1506 00

SNK 420/367 >> Built 08/95 Ø56

L mm	Part-No. LH	Part-No. RH
480	2 262 1123 01	2 262 1122 01
563	2 262 1101 01	2 262 1100 01
592	2 262 1107 01	2 262 1106 01
635	2 262 1111 01	2 262 1110 01
669	2 262 1109 01	2 262 1108 01
698	2 262 1115 01	2 262 1114 01
719	2 262 1103 01	2 262 1102 01

SNK 420/367 Built 08/95 >> Ø46

L mm	Part-No. LH	Part-No. RH
300	2 262 1143 02	2 262 1142 02
325	2 262 1145 02	2 262 1144 02
480	2 262 1123 02	2 262 1122 02
563	2 262 1101 02	2 262 1100 02
592	2 262 1107 02	2 262 1106 02
635	2 262 1111 02	2 262 1110 02
669	2 262 1109 02	2 262 1108 02
698	2 262 1115 02	2 262 1114 02
719	2 262 1103 02	2 262 1102 02

Information!

To provide technical support and parts identification the following information:

- Type designation of axle (Type / Version)
- Ident no.
- Prod. no. / Serial Nr.

Production no. / Serial no. of axle on RH of stub (in direction of travel)

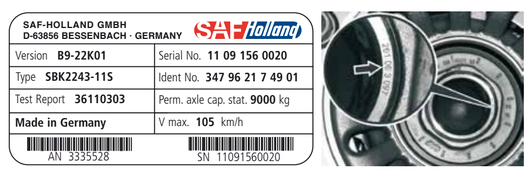

P11.582GB 1010 Amendments and errors reserved © SAF-HOLLAND

SAF-HOLLAND GmbH
Hauptstraße 26 · D-63856 Bessenbach · Germany · Tel: +49 (0) 6095 301 301 · Fax: +49 (0) 6095 301 494 · www.safholland.com